

## **Rules for using the automated parking garage at IOCB Prague, Flemingovo nám. 2, Prague 6 (Bechyňova street entrance)**

### **Parameters:**

Parking in the automated garage is permitted only for vehicles with a maximum weight of 2.5 t, maximum width of 2.2 m, and maximum height of 1.9 m. LPG and CNG vehicles are prohibited!

### **Instructions for arrival:**

- Open the roller door by holding your parking card over the scanner.
- The door will open, and the light will turn green. You must park within 2 minutes.
- Drive onto the parking pallet according to the directions to light up the OK sign.  
(If maximum vehicle weight or size is exceeded, drive out of the garage.)
- Turn off your motor, ensure first gear is engaged, and set the parking brake.
- Turn off all lights and other devices.
- Roll up the windows. If applicable, retract the antenna, check the ashtray, and fold in the side mirrors. Remove the keys from the ignition.
- Once all occupants have exited the vehicle, lock it.
- Exit the parking terminal.
- Confirm parking with the parking card at the roller door and **ensure the line of sight of the door sensor is not obscured**. The roller door closes, and the parking sequence begins.

### **Instructions for departure:**

- Confirm departure by holding your parking card over the scanner at the roller door.
- When your vehicle has been retrieved, the roller door will open. You may then enter the parking terminal and drive your vehicle out.
- The roller door will automatically close 20 seconds after the vehicle has left the parking terminal.

**In case of emergency, press the STOP button located in the parking terminal.**

### **To report problems, please contact:**

- weekdays from 7 a.m. to 3:30 p.m. – Jan Janoušek (+420 739 002 227) or Miroslav Dolejš (+420 731 194 188)
- off-hours – dispatching (774 002 552, 608 672 766)

Position of card scanner and door sensor

